
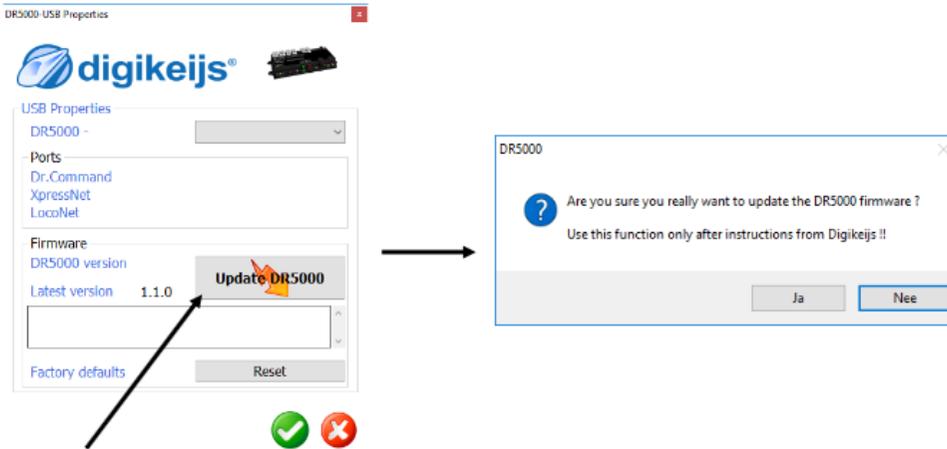


3.8 Firmware recovery mode

It may happen that something goes wrong when updating the firmware. If this should happen, it is possible to update the firmware by following these steps of the DR5000.

- 1) Only connect the DR5000 to the supplied power adapter.
- 2) Press the green button and hold it down.
- 3) Press the red button and hold it down.
- 4) Release the green button while holding down the red button.
- 5) Press the green button again.
- 6) Both the green and red LEDs under the GO and STOP switches will light up simultaneously.
- 7) Connect the USB cable.
- 8) Open the DR5000 configuration software.
- 9) The firmware update screen will start automatically

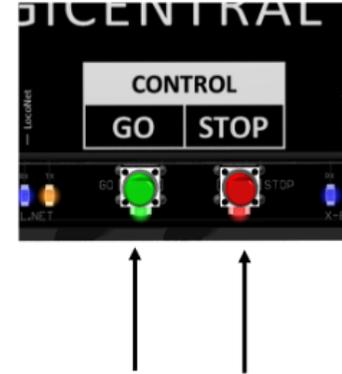

- 10) Press "UPDATE DR5000" and then click "Yes".
- 11) The firmware is now uploaded to the DR5000.